



Epson Perfection Scanners

(Scanning Film)

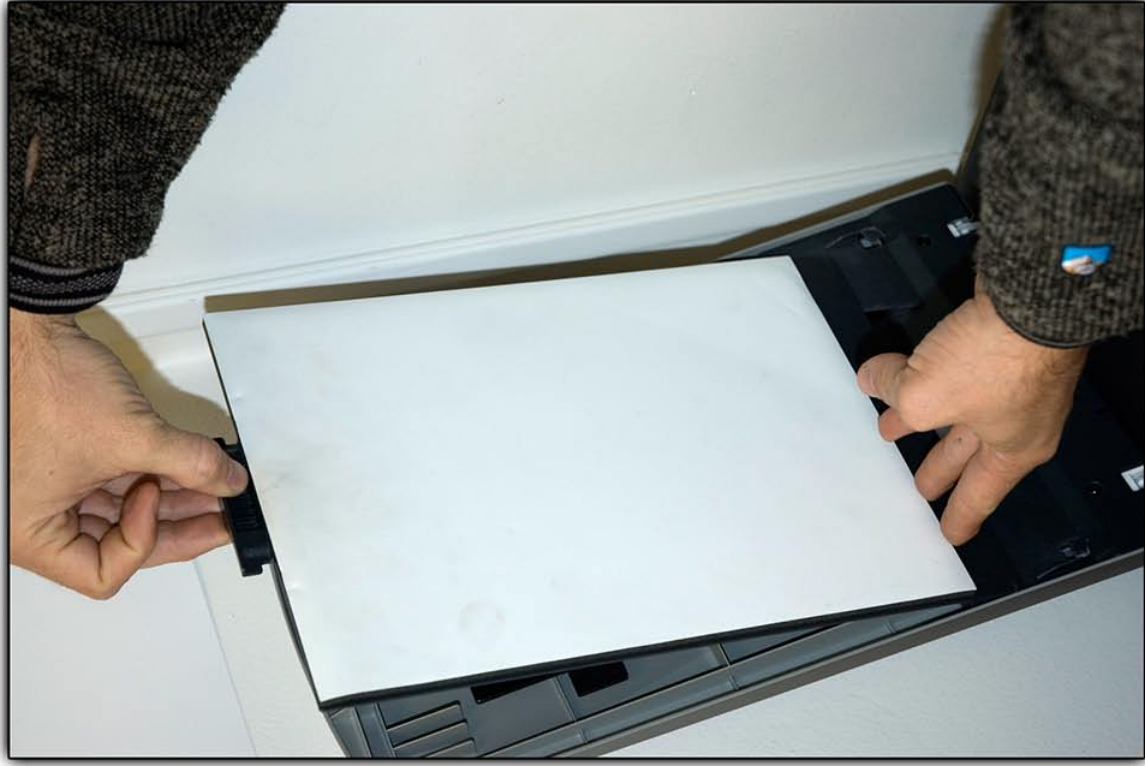

1.

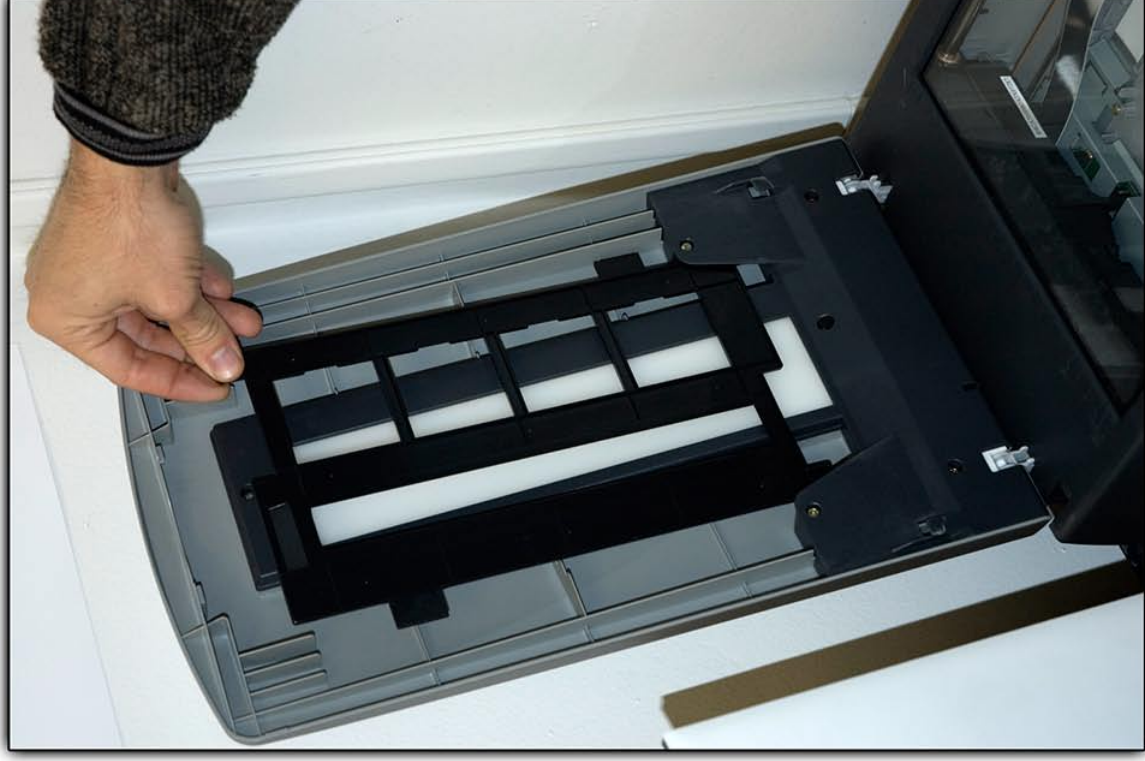

2.

Inserting film into Epson Perfection 2400 Scanners:

Remove the white backing used for reflection scanning by pulling it out from underneath the scanner lid.

Next remove the scanner's film carrier and insert your film, emulsion side up. Match the arrow on the top right corner of the film carrier to the arrow in the top right corner of the scanner. Close the lid and continue in Photoshop.

Please be sure to put back the film carrier and replace the white backing when you are finished.

